


Installation - Wave-Piercer / Speed-Tube

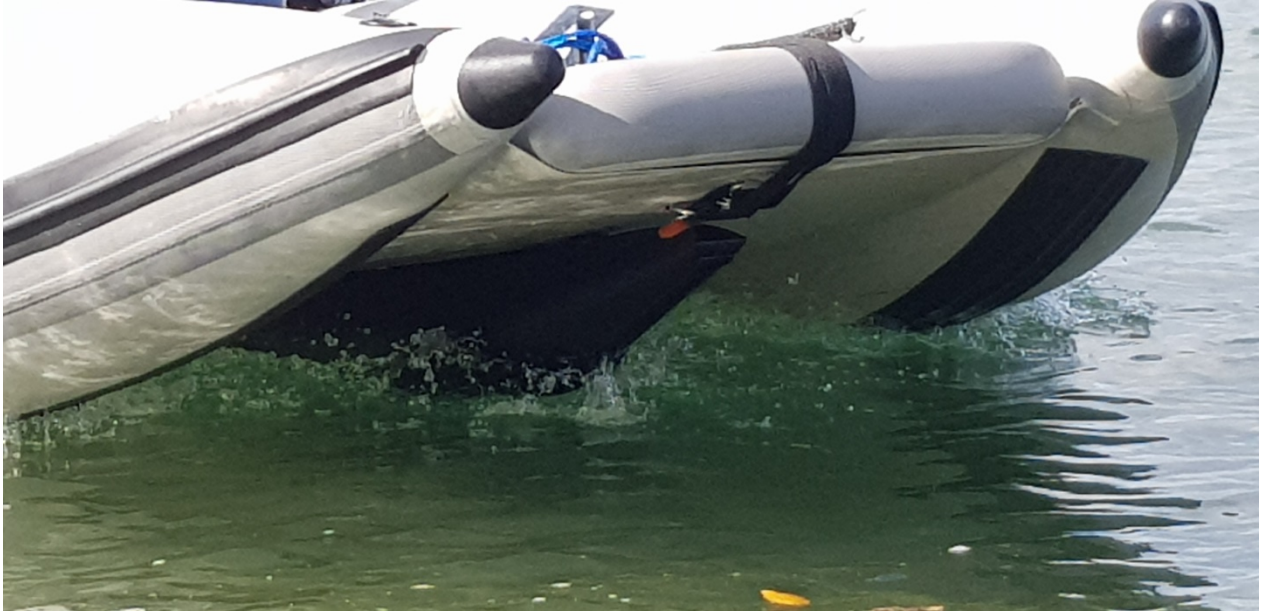

When inflated (250mbar / 3.6PSI), the Speed-Tube is attached to the rings of the bow fixation under the connecting floor and additionally fixed centrally to the lower transom bar, on the left and right side of the transom plate, using the two tension straps supplied.